


HOW TO MAKE A WEDGE

Material needed:


Cardboard	36" x 48"
Foam	1/4" x 32" x 18"
Fabric or vinyl tablecloth for cover	52" x 60"
Tape, e.g. duct or strapping tape	
Box cutter type knife	

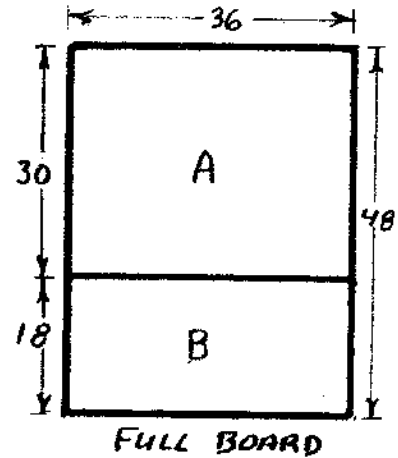


Directions:

- Cut 18" off the long side of the cardboard giving two rectangles (A) 36" x 30" & (B) 36" x 18"


- Cut the remaining large piece of cardboard (A) in half to get two pieces 18" x 30"
- From the 30" side of (A1 & A2) make a light cut 6" from the edge. This cut should not go all the way through, it is just to make bending easier.

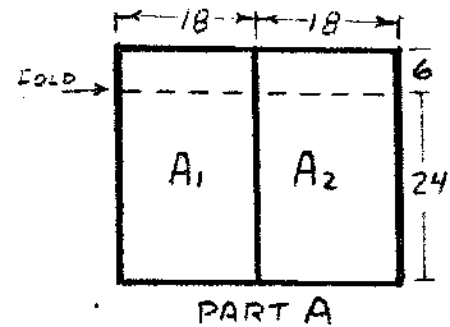

- The section remaining (B) is 18" x 36". This will be used to make triangular braces.
- Cut the long side of (B) at 13"
- Divide section (B1) into 3 portions measuring 6" x 23"
- Discard the small rectangle (B2)

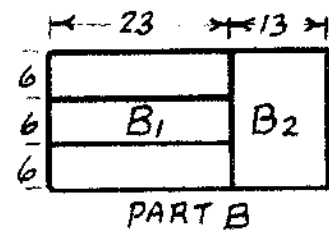


- Divide these three rectangles in half making 6 triangles measuring 6" x 23"

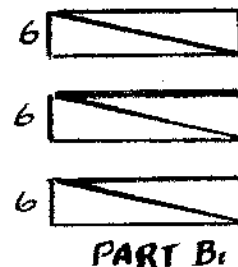


Putting it together:


- Take the two large rectangles and bend them to form the wedge shape
- Place one on top and the other on the bottom.

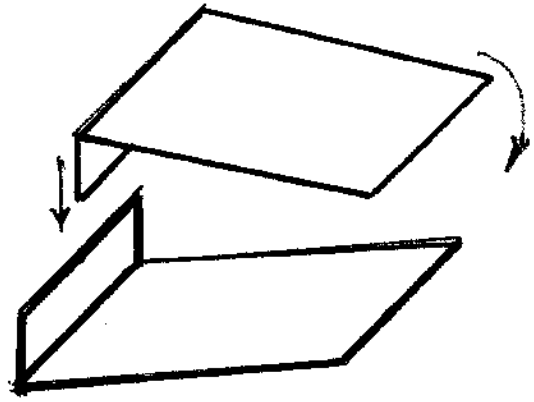

- Tape the 6 " bends together.
- The bottom piece will need to have 1 " cut off to make the edges match evenly.

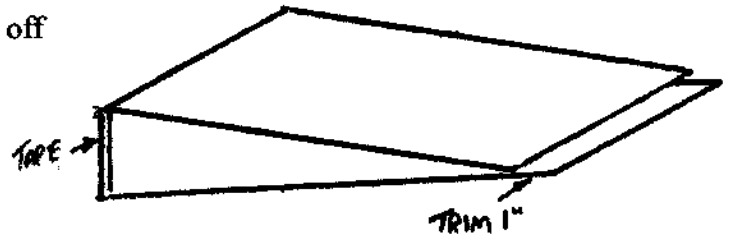

- Place the 4 triangular braces inside the wedge to give it support, using tape to hold the pieces upright.
- Place the remaining 2 triangular pieces on the ends of the wedge and tape to hold them in place.
- Tape all sides firmly together

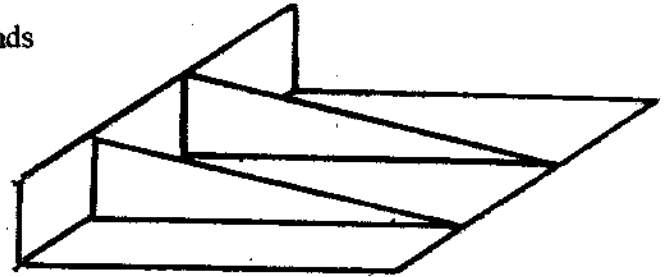

- Cover top and front of wedge with foam, taping it in place.

• Cover the whole wedge with plastic or fabric and tape it in place.

